

#### Certificate

Inspector:

#### USER QUICK GUIDE




#### Safety Instructions

Please observe the following instructions to ensure safety use:

- DO NOT attempt to replace the internal battery with anything other than authorized replacement battery by yourself.
- DO NOT operate in wet conditions, let unit dry completely before using.
- 03 Ensure proper ventilation while in use and do not obstruct fan openings on use. Inadequate ventilation may cause damage to the power station.
- DO NOT stack anything on top of the power station in storage or in use, vibration and impact may lead to poor connection to hardware inside.
- DO NOT insert foreign objects into outputs or ventilation holes.
- DO NOT place the power station near heat sources like furnace or ambient heater.
- 7 The power station generates the same potentially lethal AC power as household wall outlet, please take carefully and keep children away from it.

#### General Specs

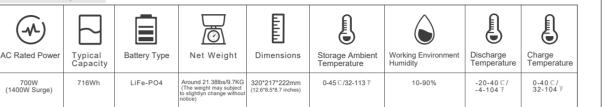

#### Output Specs

#### Input Specs



#### **Estimated Charging Time**

Around 50-60 Times

LED Light Bulb Around 20-30 Hrs

Television Around 7-8 Hrs Electronic Tools Around 7-8 Hrs


Refrigerator Around 6-7 Hrs

Around 2-3 Hrs

Slow Cooker

716Wh × DOD × η ÷ (the current load power W) = available time (unit: hrs/times)


Note: DOD indicates Depth of Discharge, n indicates inverter efficiency, DOD=90%, n=90%.

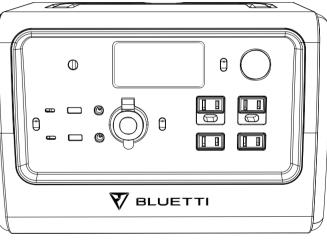

#### 716Wh Portable Power Station USER QUICK GUIDE

Please read this manual before use and follow the guidance. Keep this manual for future reference.

Detailed user manual please access: WWW.BLUETTI.COM

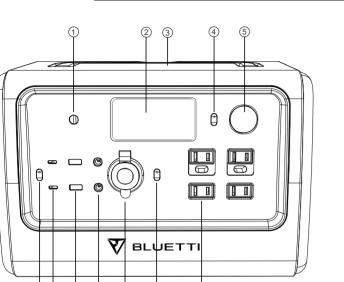

01 Charging Port 07 USB-C Port


08 USB-A Port 02 LCD Screen

03 Wireless Charging Pad 09 DC 5521 Output Port

04 LED Lamp Button 10 Cigarette Lighter Port

05 LED Lamp 11 AC Power Button

06 DC Power Button 12 AC Outlet

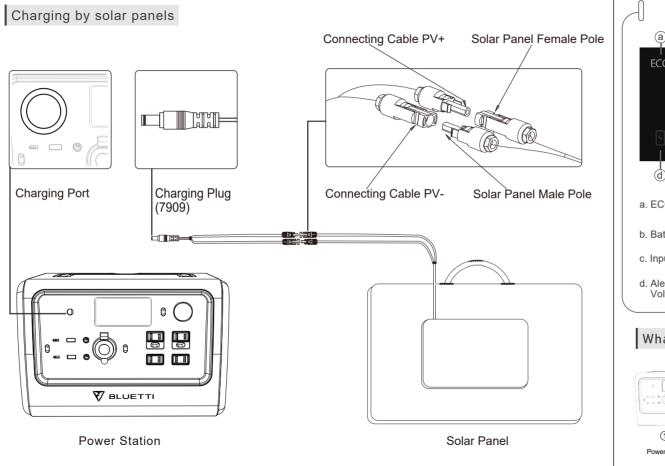

**BLUETTI** 

# LCD Screen Guide a. ECO-Mode Icon What's in the box

### e. Alert Icon for Temperature f. Output Power a. Alert Icon for Overload d. Alert Icon for Iow h. Alert Icon for Short Circuit

USER QUICK GUIDE

8888 "

ECO Mode:

10W in 4 hours for power saving.

and change the working frequency:



## Turn off the unit while the power of AC output is less than How to operate on power station to turn ON/OFF ECO Mode\ To Enter Settings Mode: Turn "AC" mode to the off position. Press "AC" and "DC" buttons at same time for 2 seconds to enter To Change Frequency Setting: Once in "Settings" mode, press the "AC" button to switch frequency of the AC output ports to either 50 or 60 Hz depending on your location. Eco Mode: Once in "Settings" mode, press the "DC" button to turn ON / OFF the ECO mode. Exit Settings Mode: Long press the "AC" and "DC" buttons at the same time for 2 seconds to save and exit the settings mode,

1 How do I clean for power station? A Dry, non-abrasive cloths to wipe will be perfect. The power station is a versatile tool for various adventures, simple cleaning would be required from time to time to keep the unit in a good condition. 2 How to store my power station? A Please place the power station in a dry and cool place at the recommended temperature. Do not expose

**V** BLUETTI

How do I know whether my device will work with the power station?

Frequently Asked Questions

A Step1: You need to figure out the amount of power your devices require. Some research may be taken on internet search or the user guide of your device shall suffice.

the power station to humid environment. If you want to store it for a long time, please charge the

battery to 80% every 6 months to extend the battery lifetime. Remind to turn off the unit before storing.

Step 2: Check the rated power of certain port on power station. For example, if the AC output port generates 2000W of power and your device requires over 2000W for a extended period of time, the power station will turn itself off.

- 4 How to claim the warranty?
- A Please place your after-sale requirement as the warranty card written to the platform where you order the product.

# QUICK GUIDE

USER QUICK GUIDE